

## Index

### A

Active profile 4-2  
    saving the 4-4  
AIMux 8-1  
Answer  
    phone call 5-6  
Any key abort 5-4  
Asynchronous mode 4-18  
Asynchronous operation 5-1, 8-1  
    data mode 5-2  
    offline command mode 5-1  
Asynchronous operation  
    Online command mode 5-1  
AT command mode 3-1  
AT Commands 1-1, 3-1  
AT commands C-1  
    description C-1-7  
    group 3-5  
    numbered 3-4  
    voice port 3-4  
Audio call 4-15  
Authentication protocols 4-13, 9-4  
Auto answer 5-6

### B

Backspace key 3-3  
B-channel  
    speed of 4-12  
B-channel speed 5-3  
BONDING 8-1  
    definition 11-1  
    disconnecting 11-3  
    placing a BONDING call 11-2  
    setup 11-2

### C

Call blocking 6-4  
Call placement strategies 5-2  
Call progress displays 5-4  
Call screening 6-4  
Call termination 5-9

Call waiting 7-1  
    does not work 14-5  
Caller ID  
    blocking 4-31  
    clearing 4-31  
    delivery 4-29  
    logging 4-30  
    numbers 4-32  
    retrieval 4-31  
    retrieve and blank numbers 5-9  
    screening 4-31  
    status 4-32  
Caller ID delivery 6-1  
Caller ID information 6-7  
Caller ID security 6-4  
Calls  
    rejected by network switch 14-5  
CHAP 4-13, 9-4  
    respond mode 4-13, 9-4  
Character echo 3-3  
Command and message options 4-25  
Command mode 4-27  
Command procedures 12-3  
Command statement 3-1  
    buffer 3-3  
    creating 3-2  
    guidelines for using 3-3  
Command verification 4-28  
Communication  
    diagnostics 15-1  
Conference calling 7-1, 7-2  
Configuration  
    changing while online 4-3  
    commands 4-1  
    default 4-5  
    options 4-1, 4-6, 4-7  
    profiles 4-1  
    remote 4-28  
    saving 4-3  
Connect incoming calls 12-4  
Connecting 5-6  
CTS  
    pin operation 12-3  
CTS flow control 4-20

**D**

Data call 4-16  
Data calls  
    terminate in 5 seconds 14-5  
Data carrier detect 4-21  
Data mode 5-2  
    returning to 5-7  
Data path compatibility 5-3  
Data port 4-17  
Data terminal ready 4-22  
DCD 4-21  
    pin operation 12-3  
Diagnostics  
    Bilateral loopback test 15-5  
    Digital loopback test 15-3  
    Global Tests 15-1  
    Local loopback test 15-2  
    Local terminal loopback 15-1  
    Ports tests 15-1  
Dial stored number  
    synchronous mode 10-2  
Dialing 5-4  
    stored phone number 5-5  
Dialing method 4-16  
Directory numbers 4-9  
Directory register 5-4  
Displaying help 3-5  
DSR  
    pin operation 12-3  
DTE  
    interface pins 12-2  
DTE character echo 3-3  
DTE Interface E-2  
DTE speed 4-18  
DTE status LED 5-7  
DTR 4-22  
    pin operation 12-2

**E**

Echo  
    satellite canceling 5-3  
Echo disable tone 4-16  
End-to-end option adaption 5-8  
Escape Sequence +++ 3-1, 5-2

**F**

Factory profile 4-2  
    loading the 4-3  
Factory profiles D-1  
Flexible calling for Pacific Bell  
customers 7-3  
    Message waiting 7-3  
Flow control  
    XON/XOFF 4-20  
Flow control options 4-20

**G**

Group commands 3-5

**H**

Hang up 5-7  
Help feature 3-5

**I**

Interfaces  
    DTE E-2  
    ISDN E-1  
    POTS E-3  
Internet access 9-1  
ISDN B-1  
    data channel options 4-11  
    switch setup 4-7  
ISDN interface E-1  
ISDN link speed 5-3

**L**

LCD panel  
    locking the 4-28  
LED  
    DTE status 5-7  
Loading and saving configuration 4-3

**M**

Message display 4-25  
Message waiting 7-1, 7-3

**N**

Network switch type 4-7  
Numbered commands 3-4

**O**

Offline command mode 5-1  
Online command mode 5-1  
Operation modes 5-1  
Order codes  
    table of B-2  
Ordering codes B-1  
Ordering ISDN B-1

**P**

PAP 4-13, 9-4  
Pause  
    long 5-4  
Pause mode  
    synchronous 10-1  
Phone number  
    dialing stored 5-5  
    display stored 5-5  
    storing a 5-4  
Pin options 4-17  
Point-to-point protocol 9-1  
POTS interface E-3  
PPP  
    multi-link 9-1  
    single-link 9-1  
Profile  
    factory 4-2  
    stored 4-2  
Profiles  
    active 4-7  
Protocol  
    BONDING 11-1  
    V.120 4-20

**R**

Rate adaption 5-2, 5-3  
Rate multiplier 8-1, 9-2, 11-2  
Remote configuration  
    connect messages 4-28  
    password 4-28

**R**

Repair 14-1  
Repeating a command 3-4  
Request to send / clear to send 4-24  
Response form 4-25  
Response messages  
    choosing to use 4-25  
Return online 5-7  
RTS/CTS flow control 4-20

**S**

Security options 4-28  
Service Profile Identifier (SPID)  
    for AT&T switches 4-9  
Speech call 4-15  
SPID 4-9  
Status and connect messages 5-8  
Stored profile 4-2  
Switch  
    network type 4-7  
    software version 4-8  
Synchronous  
    mode 10-1

**T**

TEI 4-10  
Terminal adapter  
    restarting 5-8  
Terminal Endpoint Identifier 4-10  
Troubleshooting 14-1, 15-1

**V**

V.25 bis 12-1  
    message frames 12-2  
    operation in 12-2  
    selecting 12-1  
Voice port 4-17  
Voice port commands 3-4  
Voice SPID 4-9

**X**

XON/XOFF flow control 4-20

*Index*

---



*Index-4*

*BitSURFR Pro*