220V CONFIGURATION

Boschert Power Supply

Identified by the word "Boschert" on the component side of the board at lower right and above the fuse and capacitor C2.

Locate a six-inch wire that is soldered to point JP1. If the board is configured for 110V, the other end of the wire is attached to point E1 (labelled 110V).
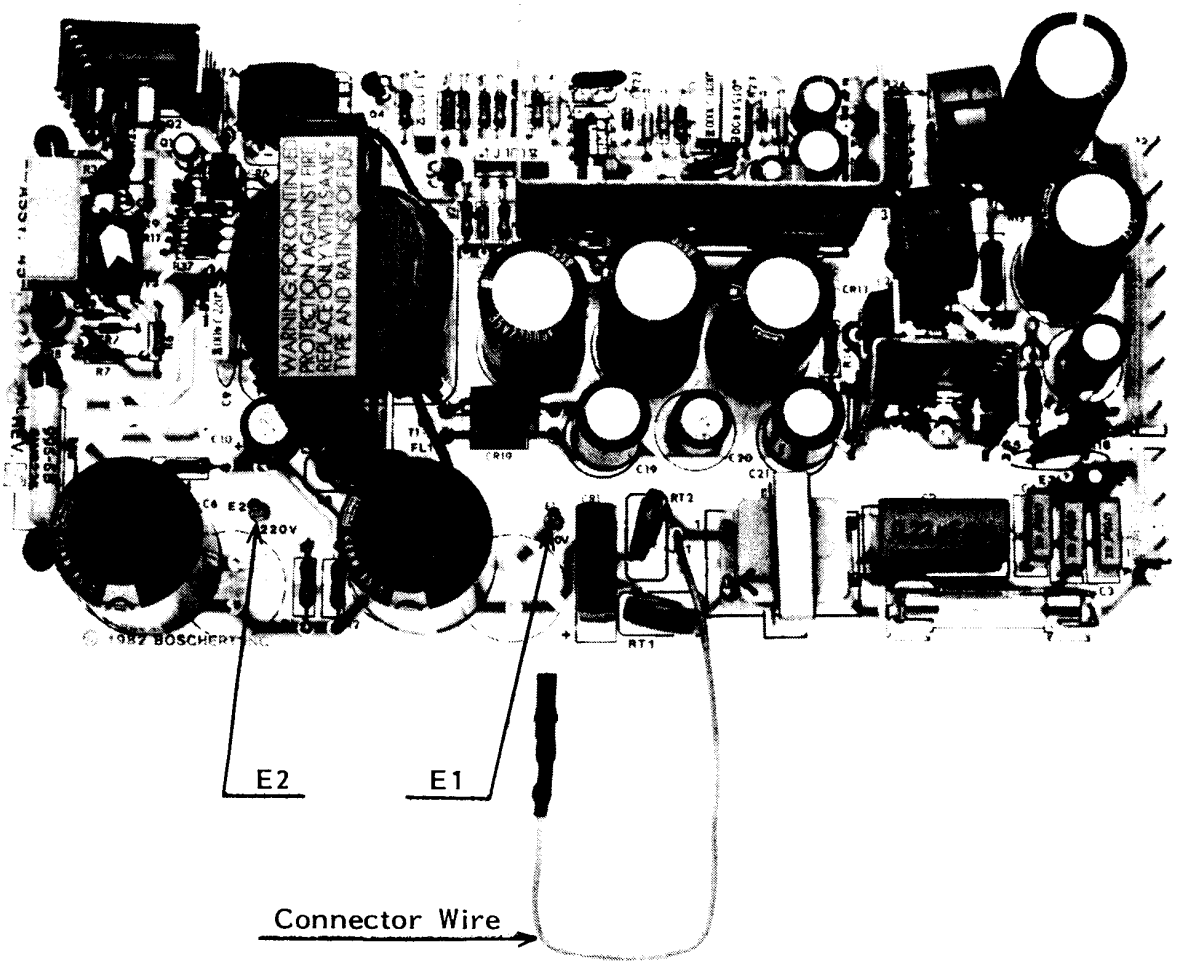
Unplug the wire from point E1 and plug it into point E2 (labelled 220V). Point E2 is to the left of point E1. The power supply is now configured for 220V use.