10.3 HARD DRIVE CONFIGURATION MICROSCIENCE

Figure 10.1
Microscience
9 Position Switch

There are two types of drive selection switch banks available on Microscience drives. One type has nine (9) switches and one type has ten (10) switches. These switches are located on the drive PCB next to the power plug.

9 POSITION SWITCH: Pins 1, 2, and 4 should be in the "up" position .

Figure 10.2
Microscience
10 Position Switch

10 POSITION SWITCH: Pins 1, 3, 4, and 10 should be in the up position.

Refer to Figures 10.1 and 10.2 for Microscience drive configuration.

SEAGATE

Figure 10.3
Seagate Hard Drive

Option shunt block

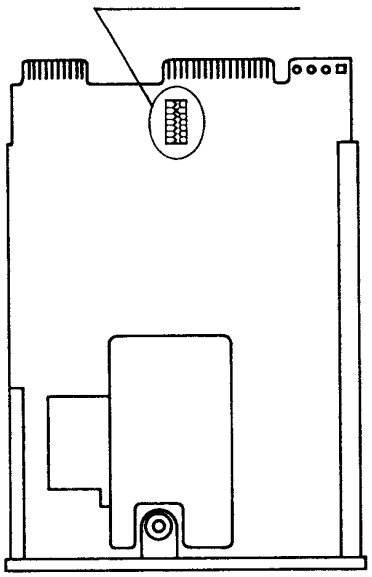

Next to the connector for the data cable, is a 16 pin option shunt block. Pins 7 and 10 should be jumpered.

Refer to figure 10.3 for Seagate drive configuration.